


# DIN 334-B • DIN 335-B • DIN 347-B


Pogłębiacze wielostrzowe z chwytem Morse'a

Multiflute countersinks Morse taper shank


Kegelsenker, Morsekegel

Зенковки многоперьевые с хвостовиком типа "конус Морзе"

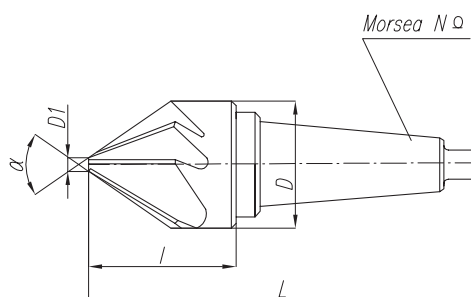


<b>DIN 334-B</b>	<b>Z=6+16</b>	<b>α=60°</b>	
------------------	---------------	--------------	--

D	D1	Morse taper No	L	l	z	α	HSS		HSS-E	
							Code No 0641-261-		Code No 0641-261-	
16	3.2	1	100	24	6	60°	041100	●	041802	○
25	7	2	125	33	8	60°	041201	●	041815	○
31.5	9	2	132	40	9	60°	041303	●	041827	○
40	12	3	160	45	10	60°	041405	●	041839	○
50	16	3	170	50	12	60°	041507	●	041904	○
63	20	4	200	58	14	60°	041609	○	041917	○
80	25	4	215	73	16	60°	041700	○	041929	○

<b>DIN 335-B</b>	<b>Z=6+16</b>	<b>α=90°</b>	
------------------	---------------	--------------	---

D	D1	Morse taper No	L	l	z	α	HSS		HSS-E	
							Code No 0641-261-		Code No 0641-261-	
16	3.2	1	95	20	6	90°	046103	●	046806	○
25	7	2	118	26	8	90°	046205	●	046819	○
31.5	9	2	122	30	9	90°	046307	●	046831	○
40	12	3	150	35	10	90°	046409	●	046843	○
50	16	3	155	38	12	90°	046500	●	046908	○
63	20	4	185	43	14	90°	046602	●	046910	○
80	25	4	196	54	16	90°	046704	●	046922	○

<b>DIN 347-B</b>	<b>Z=8+10</b>	<b>α=120°</b>	
------------------	---------------	---------------	---

D	D1	Morse taper No	L	l	z	α	HSS		HSS-E	
							Code No 0641-261-		Code No 0641-261-	
25	7	2	112	20	8	120°	054107	○	054504	○
40	12	3	140	25	10	120°	054300	○	054606	○